

Flat Panel Driver Removal


Step 1: On the back of the flat panel, unscrew the single screw holding the driver cover in place. Remove cover.



Step 2: Unplug red and black leads from the driver.



Step 3: Remove the 2 screws from the side of the driver. This will allow you to fully remove the driver from the flat panel. Re-attach the two screws to the flat panel.

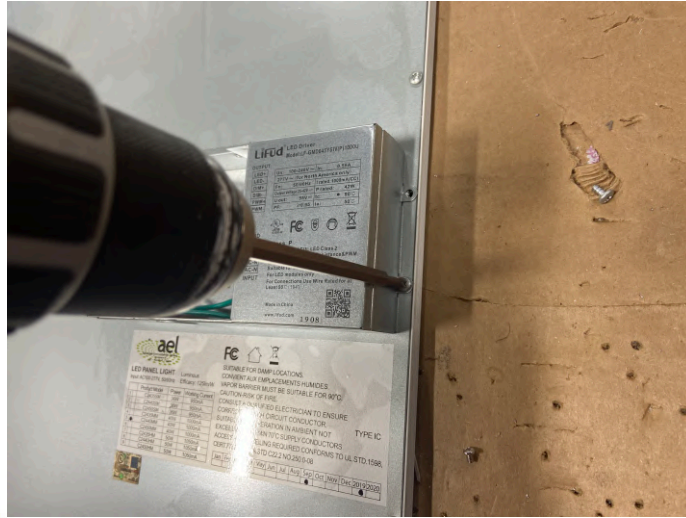


Flat Panel New Pre-Wired Driver Installation

Step 4: Install the pre-wired driver box by attaching the blue negative lead to the black negative from the panel. Attach the red positive lead to the red positive from the panel.



Step 5: Remove the two earthquake clips. These will be used to hold the new driver in place.

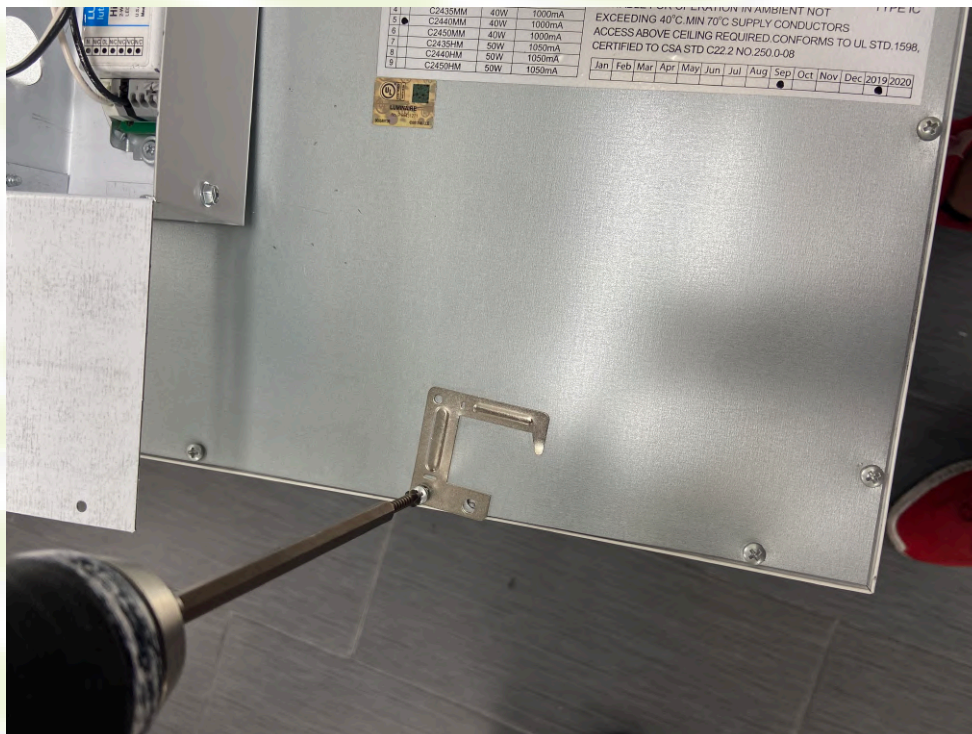

Step 6: Place the new pre-wired driver box underneath the earthquake clips, and then re-attach the earthquake clips. Installation is complete.

