

CAUTION: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SAVE THESE INSTRUCTIONS!



WARNING: Before beginning installation, disconnect electrical power at main switch or circuit breaker.

IMPORTANT SAFEGUARDS

Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable. Installation and servicing of this equipment should be performed by qualified service personnel only. Do not mount near gas or electric heaters. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition. Any modification or use of non-original components will void the warranty and product liability. Do not use this equipment for other than intended use.


1 Remove the front lens and using the mounting holes on the backplate, mark for placement, drill pilot holes and secure the unit to the desired surface.

2 Pull fixture wires out and connect to existing wiring, being sure to have a secure ground.

- Black fixture wire to black (Hot) Junction Box wire
- White fixture wire to white (Neutral) Junction Box wire
- Green fixture wire to Ground


Place all wiring and connectors back into the unit.

3 Place the lens back into place.

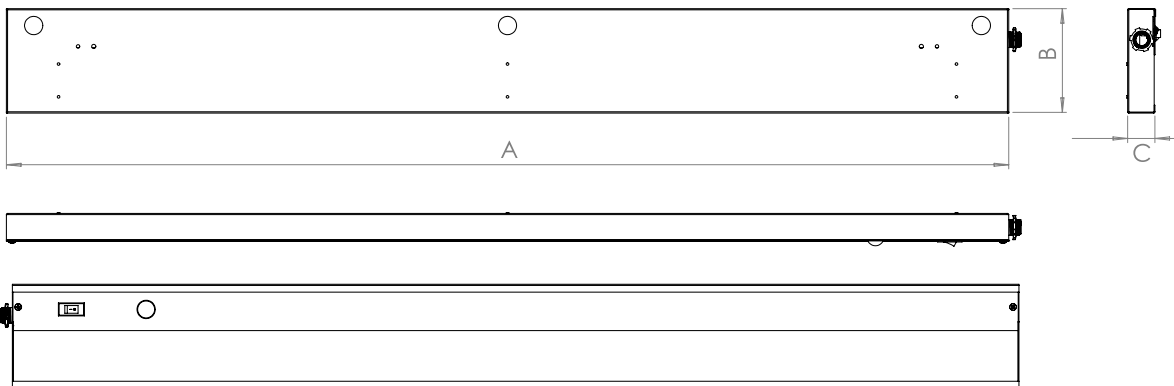

Drawing shown with rocker switch, occupancy sensor, and joiner hub.

CONTINUOUS LENGTHS

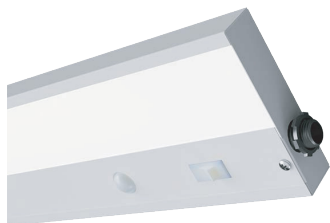

- Joiner hub and wiring harness included for continuous run lengths.
- Knockouts provided on both fixtures allow for quick joining of fixtures in the field.
- Joiner whip for linking multiple units available as an option