

CAUTION: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SAVE THESE INSTRUCTIONS!



WARNING: Before beginning installation, disconnect electrical power at main switch or circuit breaker.

IMPORTANT SAFEGUARDS


Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable. Installation and servicing of this equipment should be performed by qualified service personnel only. Do not mount near gas or electric heaters. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition. Any modification or use of non-original components will void the warranty and product liability. Do not use this equipment for other than intended use.

WARNING: Risk of Fire or Electric Shock


Before beginning installation or service, disconnect the power by turning off the circuit breaker. Turning the power off by using the light switch is not sufficient to prevent electrical shock. This fixture is for outdoor use and should not be used in areas of limited ventilation or high ambient temperature. All work should be performed by a qualified electrician.

IMPORTANT: This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Ceiling Mount

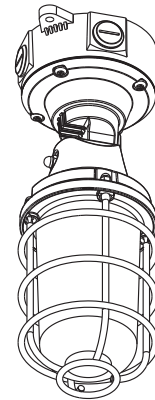

Wall Mount

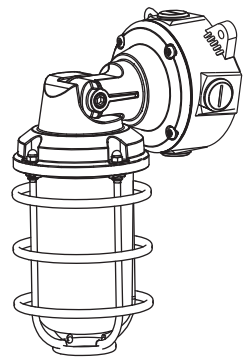

INSTALLATION INSTRUCTIONS

STEP 1: Install the desired mounting fitting – recessed box adapter, surface box, pendant, or wall adapter.

STEP 2: Install the mounting screws (supplied).

STEP 3: Slip the mounting gasket over the power leads and line up the mounting key slots.

STEP 4: Connect the supply leads to the fixture leads – black to black (hot), white to white (neutral).

STEP 5: Tighten the mounting screws.

TROUBLE SHOOTING

If the light does not work, check the power source and check electrical connections.

