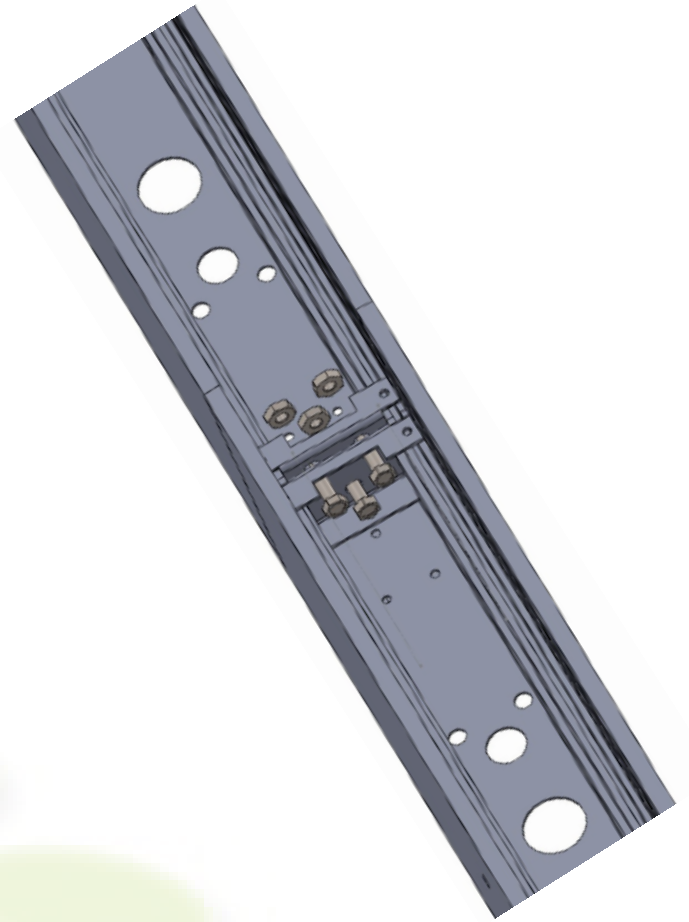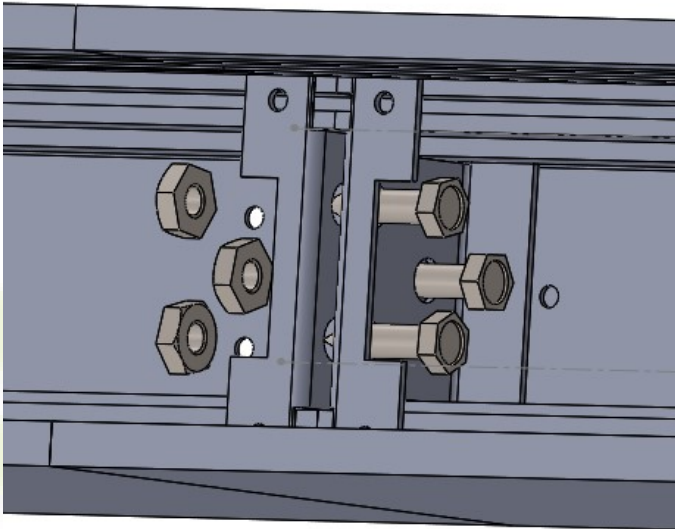- Inner Continuous Run Mount Installation

- Outer Continuous Run Mount Installation