

Advantage Environmental Lighting - Pendant Instructions
NOTE: FIXTURES MUST NEVER BELIFTED FROM SIDES OR ENDS, LIFT FIXTURES ONLY BY
CRADLING IN ARMS UNTIL THEY ARE SUPPORTED UNIFORMLY BY MOUNTING SYSTEM

1. LAYOUT THE FIXTURES AS INDICATED ON PLANS.
PREPARE MOUNTING LOCATIONS


STRAP WITH 1/4-20 STUD ATTACHED TO ELECTRICAL BOX

MAKE SURE ELECTRICAL BOX IS

 MOUNTING LOCATIONS WITH ELECTRICAL BOX ATTACH 1/4-20 STUD TO STRAP AND MOUNT AT CEII ING LEVEL. WIRE CORD, PASS THRU POWER FEED HOLE IN CANOPY.

BE CERTAIN ELECTRICAL BOX IS SUPPORTED BY STRUCTURAL CEILING

3. MOUNT ADJUSTABLE AIRCRAFT CABLE FITTING TO FIXTURE



CONNECT MOUNTING FITTING TO STUD ON CANOPY SIDE

SCREW KNURLED FITTING OVER TOP OF VISIBLE THREADS ON MOUNTING FITTING, TIGHTEN TO LOCK CANOPY INTO PLACE.

7. LEVEL FIXTURE BY COMPRESSING KNURLED FITTING ON
ADJUSTABLE FITTING (FIXTURE SIDE) AND FEEDING
CABLE IN OR OUT TILL LEVEL. WNEN LEVEL TIGHTEN
KNURLED NUT TO LOCK IN PLACE
TO BE INSTALLED TO FIXTURE AND

8 REPEAT STEPS 2 THRU 7 AT OTHER MOUNTING LOCATIONS


SUPPORTED BY STRUCTURAL CEILING

1/4-20 THREADED


MOUNTING FITTING

ATTACHES TO

DOUBLE SIDED STUD

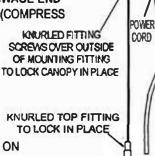

ADJUSTABLE AIRCRAFT CABLE FITTING TO BE INSTALLED TO FIXTURE AND SECURED IN PLACE WITH KNURLED TOP FITTING OR LOCKNUT

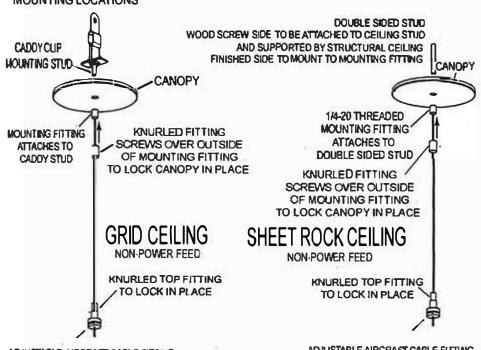

ADJUSTABLE AIRCRAFT CABLE FITTING TO BE INSTALLED TO FIXTURE AND SECURED IN PLACE WITH KNURLED TOP FITTING OR LOCKNUT ADJUSTABLE AIRCRAFT CABLE FITTING TO BE INSTALLED TO FIXTURE AND SECURED IN PLACE WITH KNURLED TOP FITTING OR LOCKNUT