




1

Remove PE masking from lens, Place the printed lens on the front of the panel, the printed side coming into contact with the luminaire.

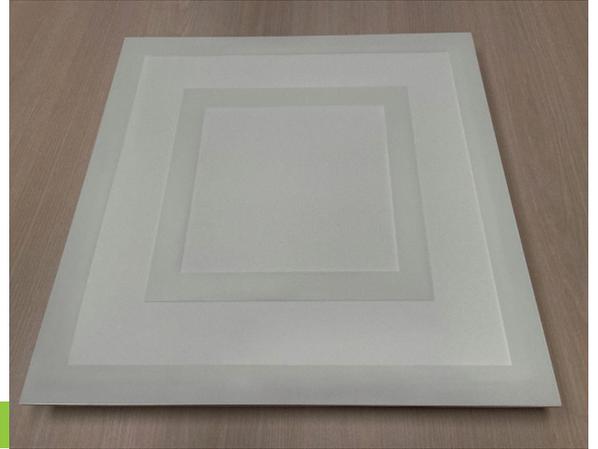

2

Align the diffuser so it is centered over the luminaire.



3



Attach the lens to the 2 X 2 panel via the 4 clips. The OEM would source their preferred 8-32 machine screw. RLR can provide the enclosed Knurled Head 1/2" long screws in the sample pack. Use the chosen screws to tighten/clamp the lens in place per the photos below (see step 4 for clip location):



4

Rear view of installed clips on the assembly. For the 2 x 2 panel, 4 clips are installed in a radial pattern as illustrated below.



5

The Completed assembly then drops into the grid ceiling frame for installation & wiring connections.





