









As with all electrical installations, care should be taken with the installation and performed by a professional. When installed properly this unit will provide years of trouble free performance and a great appearance.

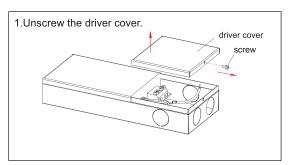

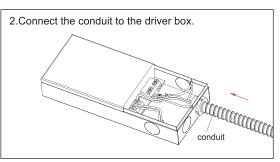

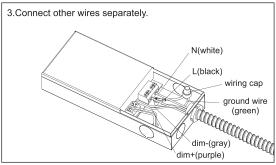

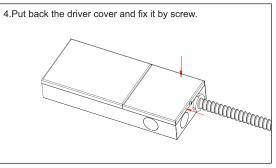

Warning

- * LED Panels are not suitable for using in wet loations
- * Please keep the LED Panel away from any corrosive substance, and please use dry cloth when you clean it
- * LED Panel can only be installed by a qualified electrician.
- * Before installation or maintenance, please disconnect the power to prevent electric shock.


(Note: Suspending installation method is not suitable to be used for products with dimensions of 1212*603mm.)










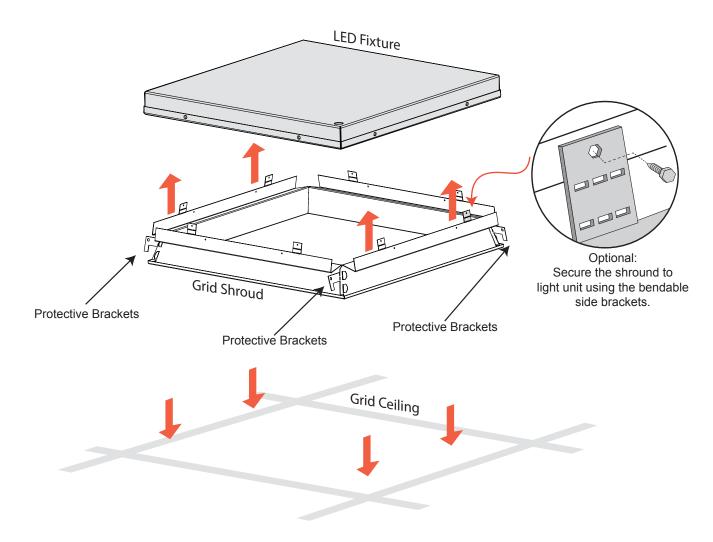

Recessed Installation

- 1. Once the light is wired and ready for installation, insert the fixture from into shroud, and place entire unit over opening.
- 2. Bend the Protective Brackets over the ceiling grid perimeter grid to secure the entire unit.

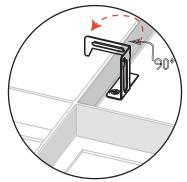


Protective Brackets are designed to be flexible and bend to conform to frame shape.







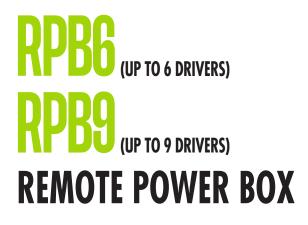



Electronic remote power supply provides power from outside the shielded MRI room, within the remote power supply enclosure.

MOUNTING INSTRUCTIONS

- 1. Mount the remote mounted power supply outside the MRI room.
- 2. Each driver will have an individual quick-connect for ease of wiring.
- 3. Ensure that all power/dimming wiring is completely shielded in grounded conduit. Use a minimum of 18 AWG low voltage supply wire.
- 4. Connect wiring to the driver and run to the installed fixtures. Connect hot and neutral wires to the light fixtures quick connects.
- 5. Installation is complete.

Ordering Information

SERIES	# OF DRIVERS		OPTIONS		
RPB6 Fits up to 6 drivers	D1	1 LED 1% Dimming Drivers	AM	Anti-Microbial White Paint	
RPB9 Fits up to 9 drivers	D2	2 LED 1% Dimming Drivers			
	D3	3 LED 1% Dimming Drivers			
	D4	4 LED 1% Dimming Drivers			
	D5	5 LED 1% Dimming Drivers			
	D6	6 LED 1% Dimming Drivers			
	D7	7 LED 1% Dimming Drivers			
	D8	8 LED 1% Dimming Drivers			
	D9	9 LED 1% Dimming Drivers			

IMPORTANT: EACH FIXTURE REQUIRES IT'S OWN DRIVER





