





Loosen wing nuts on side of fixture for fixture height adjustability (after fixture is in place).

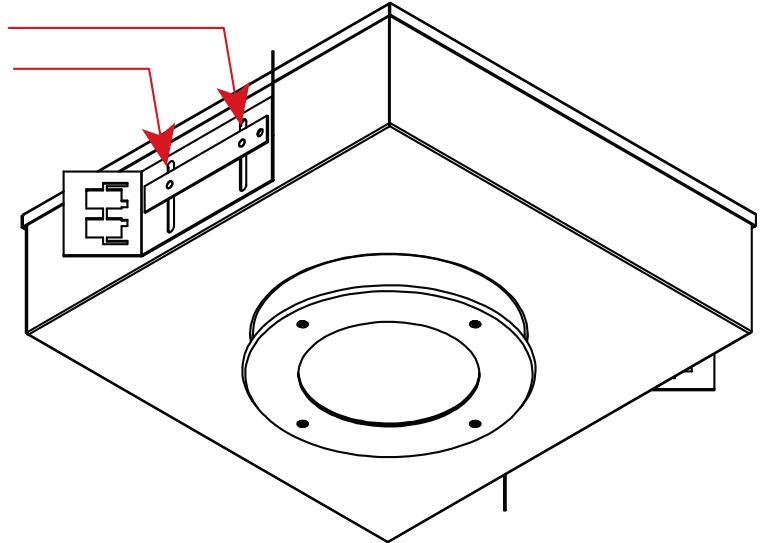


Place fixture in grid ceiling and secure by utilizing T-Grid mounting Bars (supplied by others).

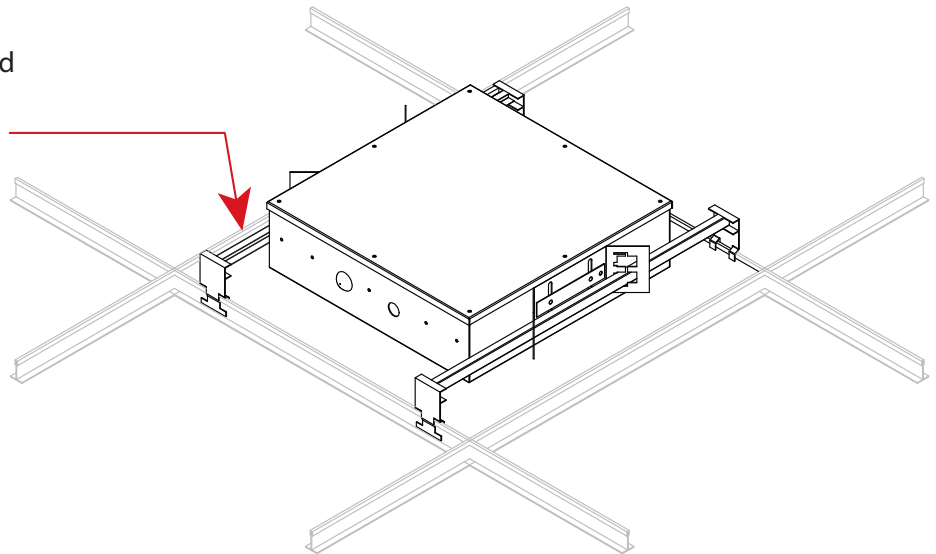


Finalize installation by adjusting height of fixture and then fully tightening wingnuts on side.

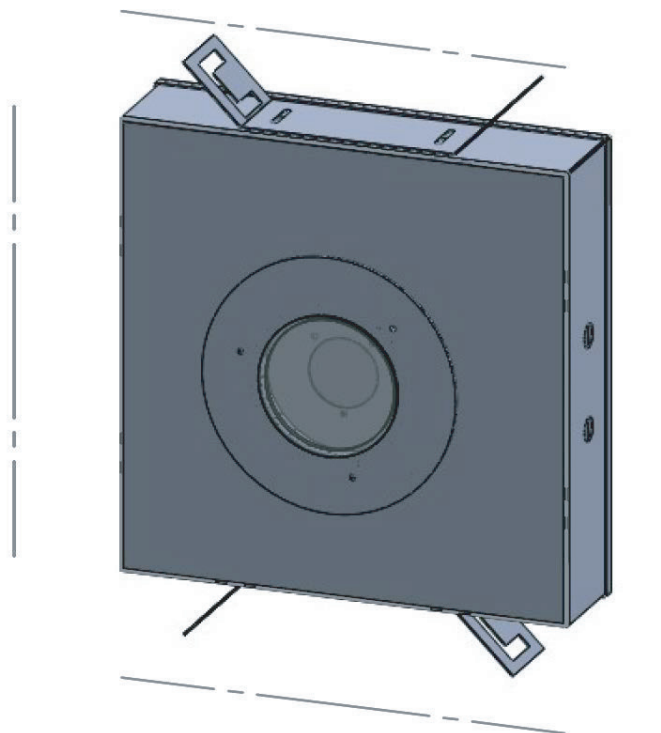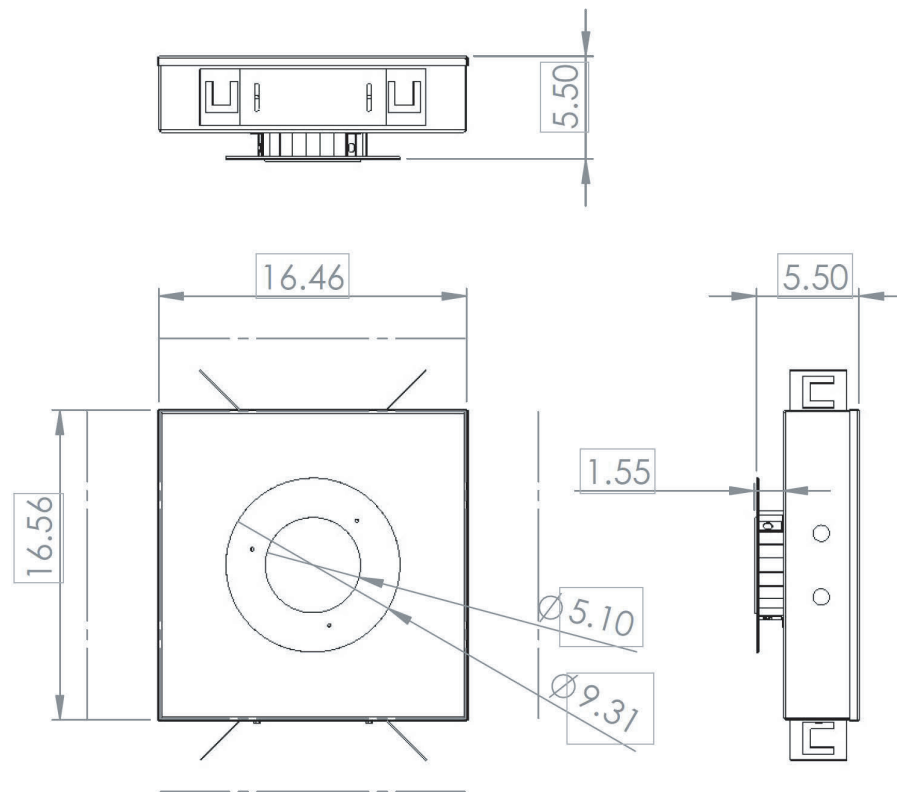


## MRI ROOM SINGLE SUPPLY SYSTEM DIAGRAM MULTIPLE SHIELDING FEEDS

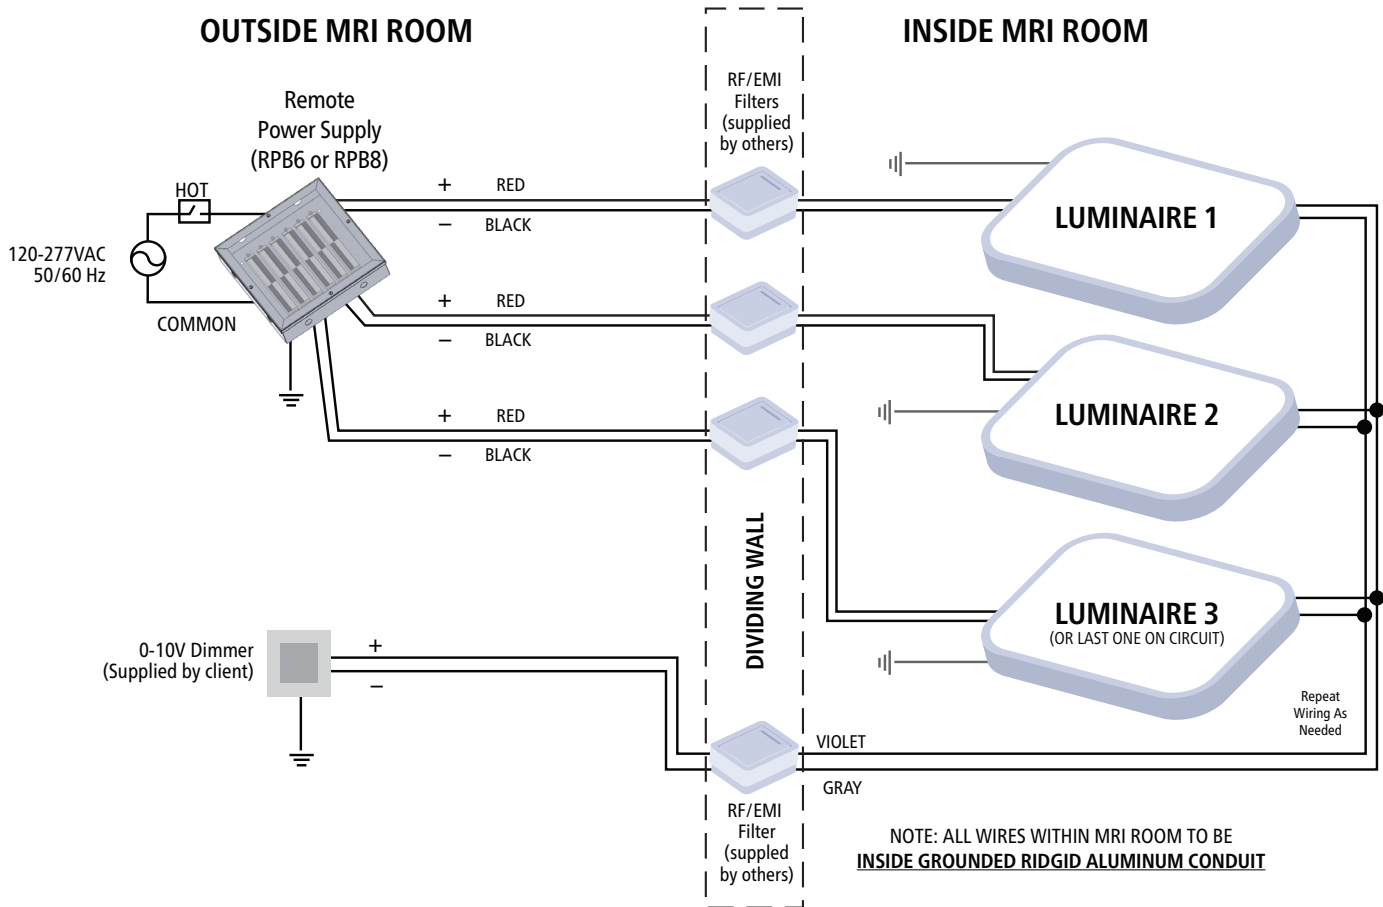

## MRI ROOM MULTIPLE SUPPLY SYSTEM DIAGRAM

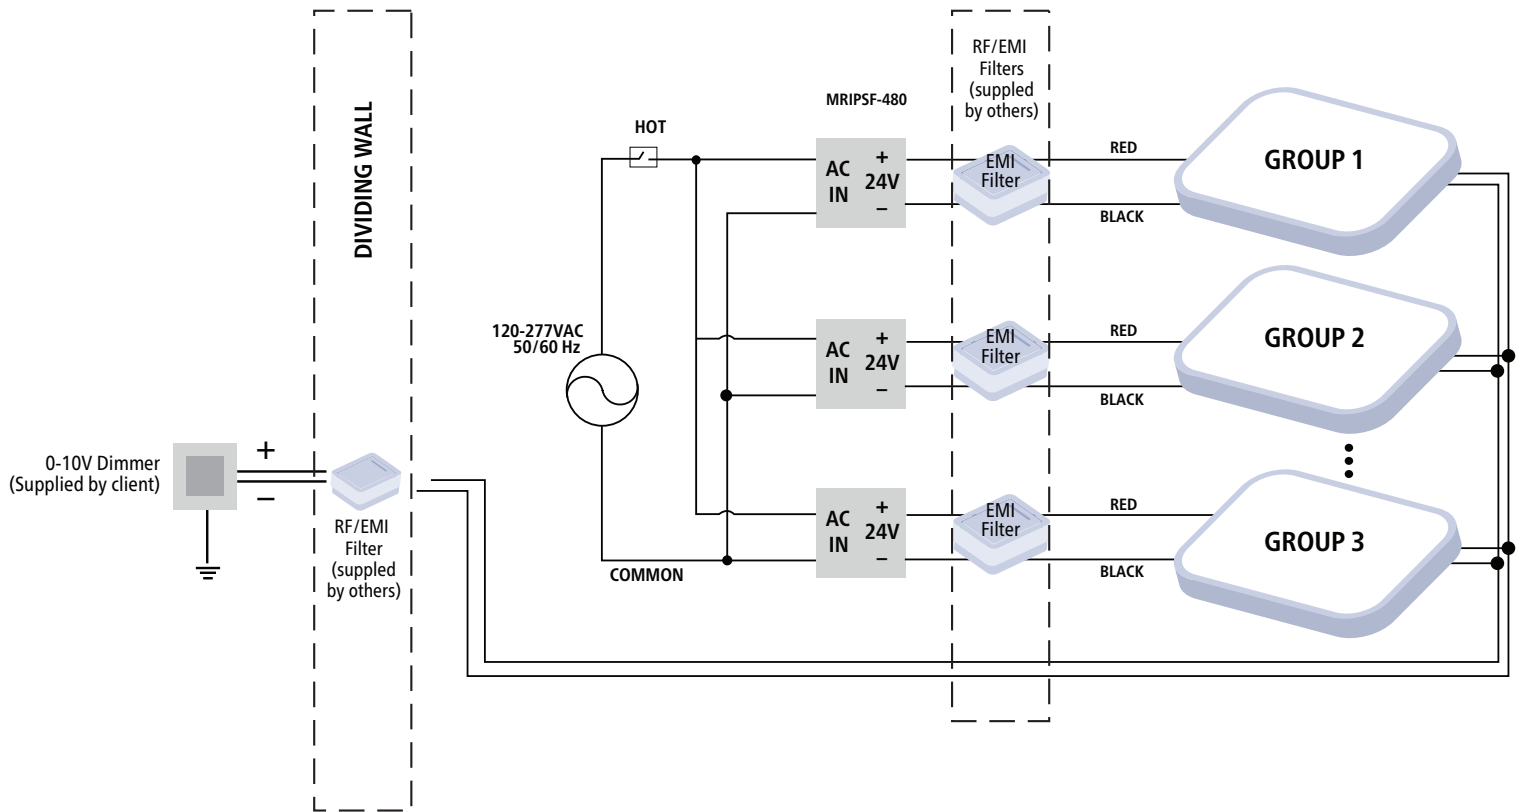

## MRI ROOM SINGLE SUPPLY SYSTEM DIAGRAM SINGLE SHIELDING FEEDS

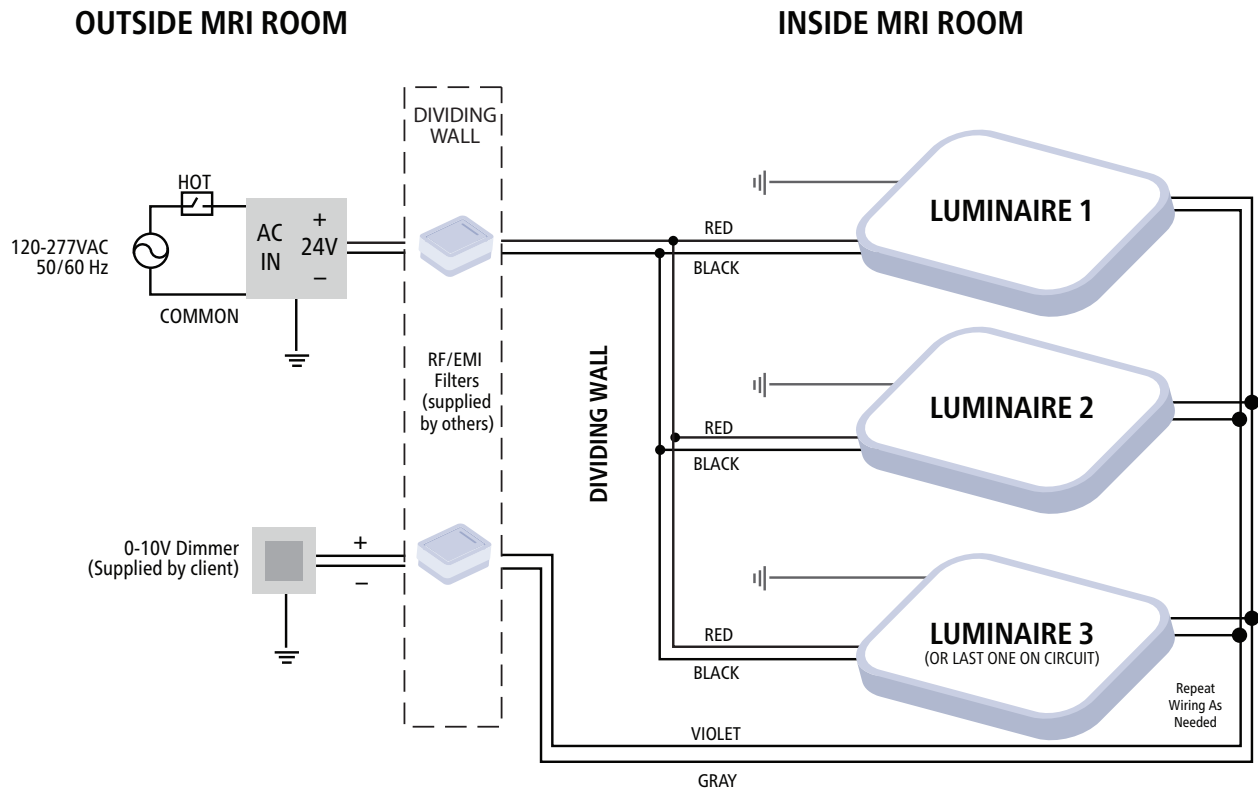

NOTE: ALL WIRES WITHIN MRI ROOM TO BE  
INSIDE GROUNDED RIDGID ALUMINUM CONDUIT