

CAUTION: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. SAVE THESE INSTRUCTIONS!




WARNING: Before beginning installation, disconnect electrical power at main switch or circuit breaker.

IMPORTANT SAFEGUARDS


Ensure that the electrical wiring conforms to the National Electrical Code NEC® and local regulations if applicable. Installation and servicing of this equipment should be performed by qualified service personnel only. Do not mount near gas or electric heaters. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition. Any modification or use of non-original components will void the warranty and product liability. Do not use this equipment for other than intended use.

Installation is easy and straight-forward. Lift fixture into ceiling and settle into the grid from above. Secure by bending brackets onto grid.


Connect fixture wires into your wiring to remote power and drivers.

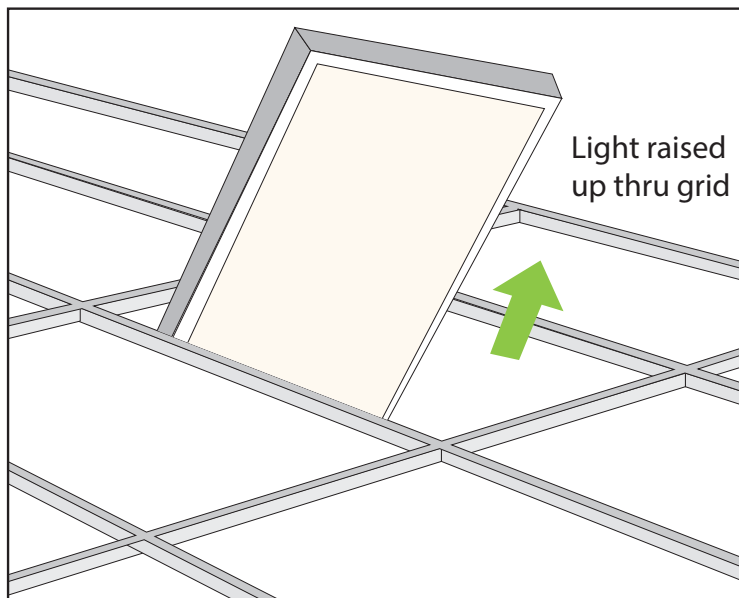


SECURITY MOUNTING CLIPS INCLUDED

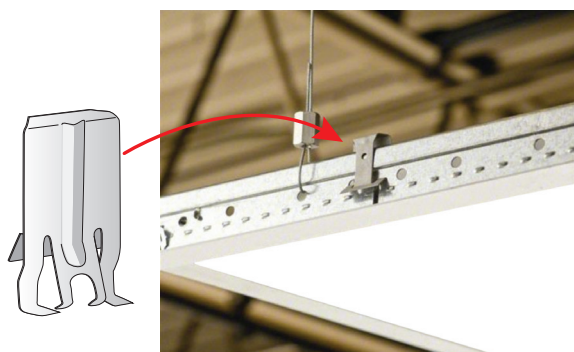

These security mounting clips are used to secure fixture to grid. Works with lenses up to 0.250" thick

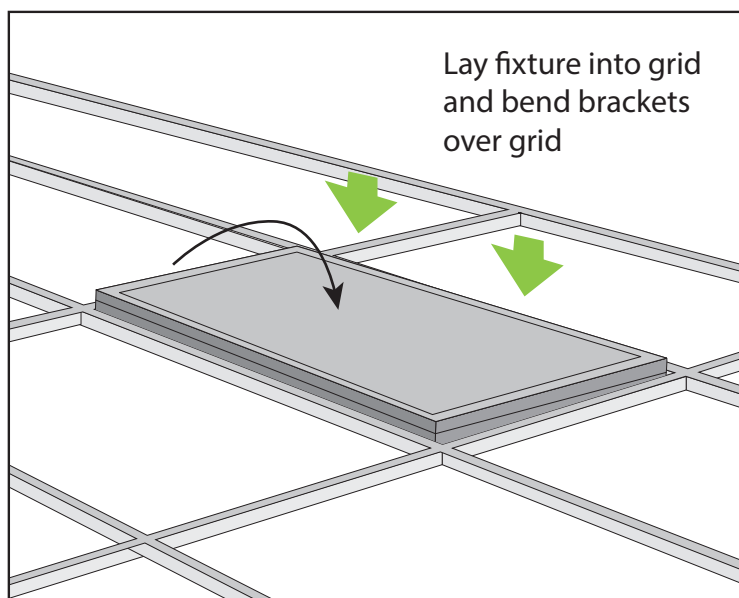


**MRI ROOM SINGLE SUPPLY SYSTEM DIAGRAM
MULTIPLE SHIELDING FEEDS**

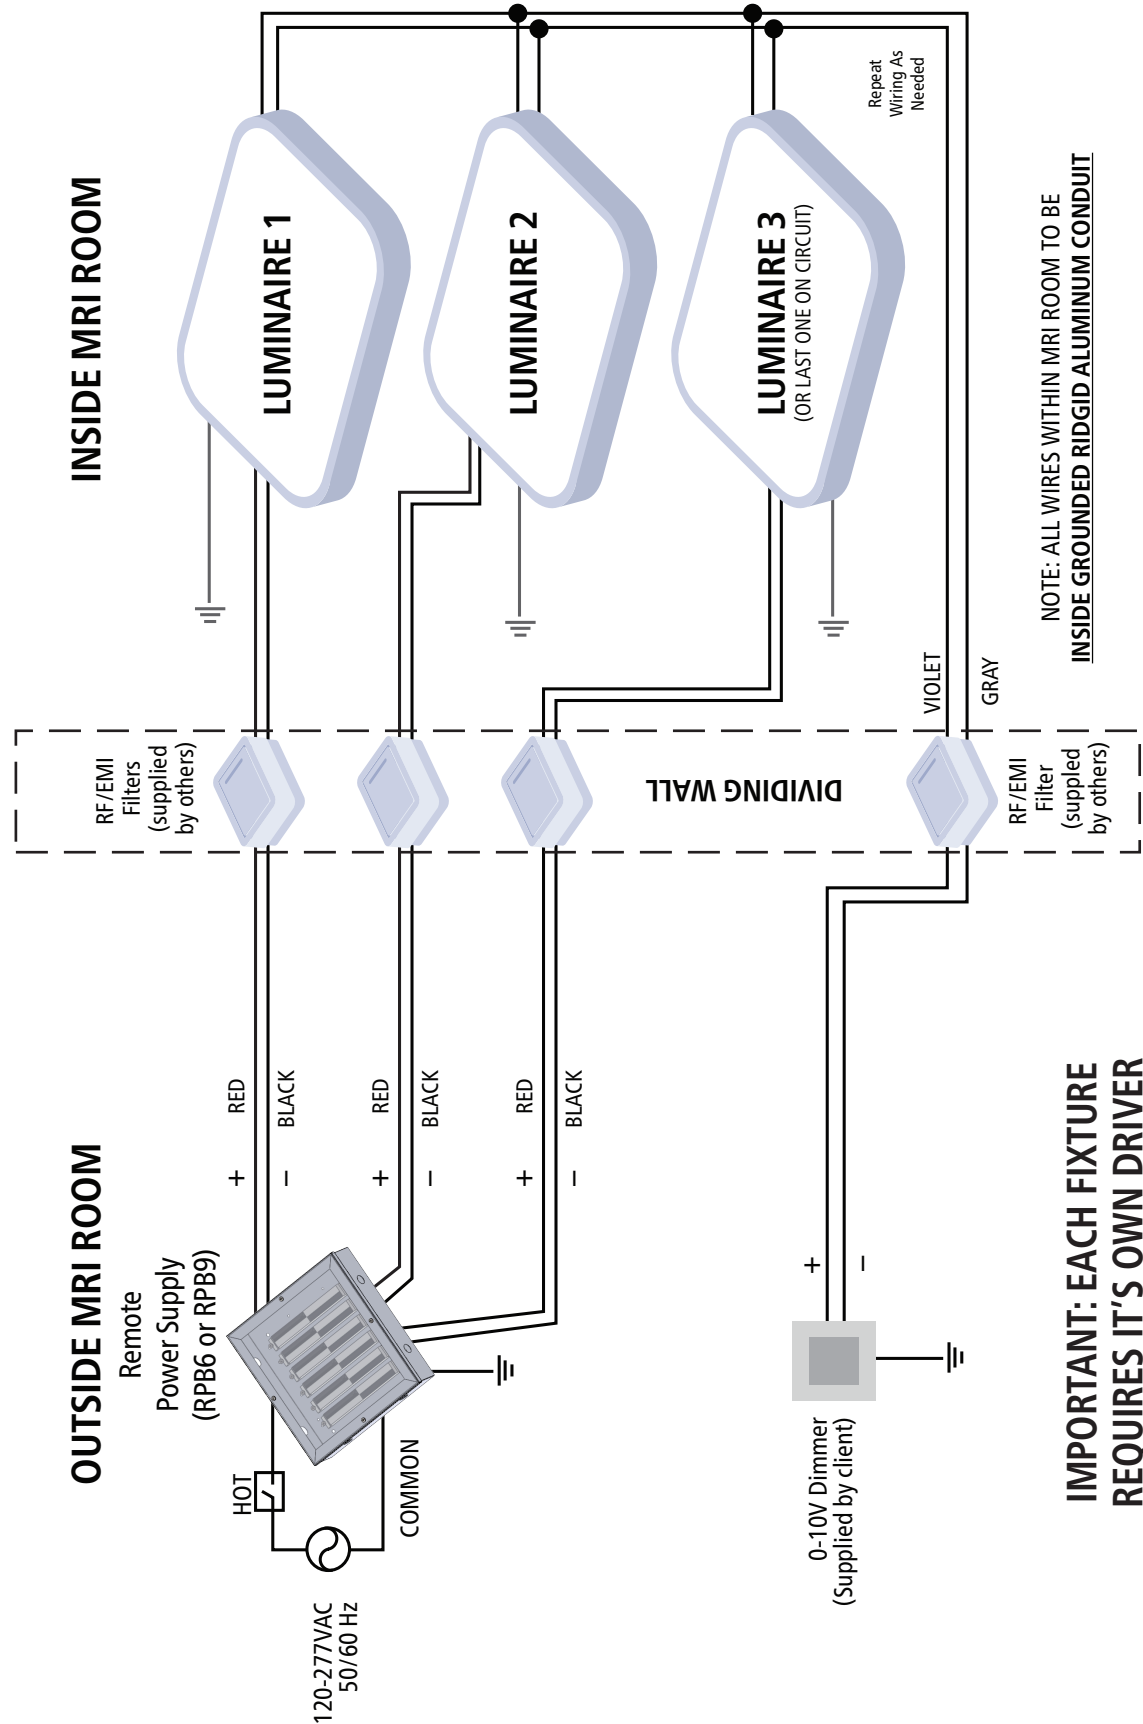

**IMPORTANT: EACH FIXTURE
REQUIRES IT'S OWN DRIVER**




MRI ROOM MULTIPLE SUPPLY SYSTEM DIAGRAM

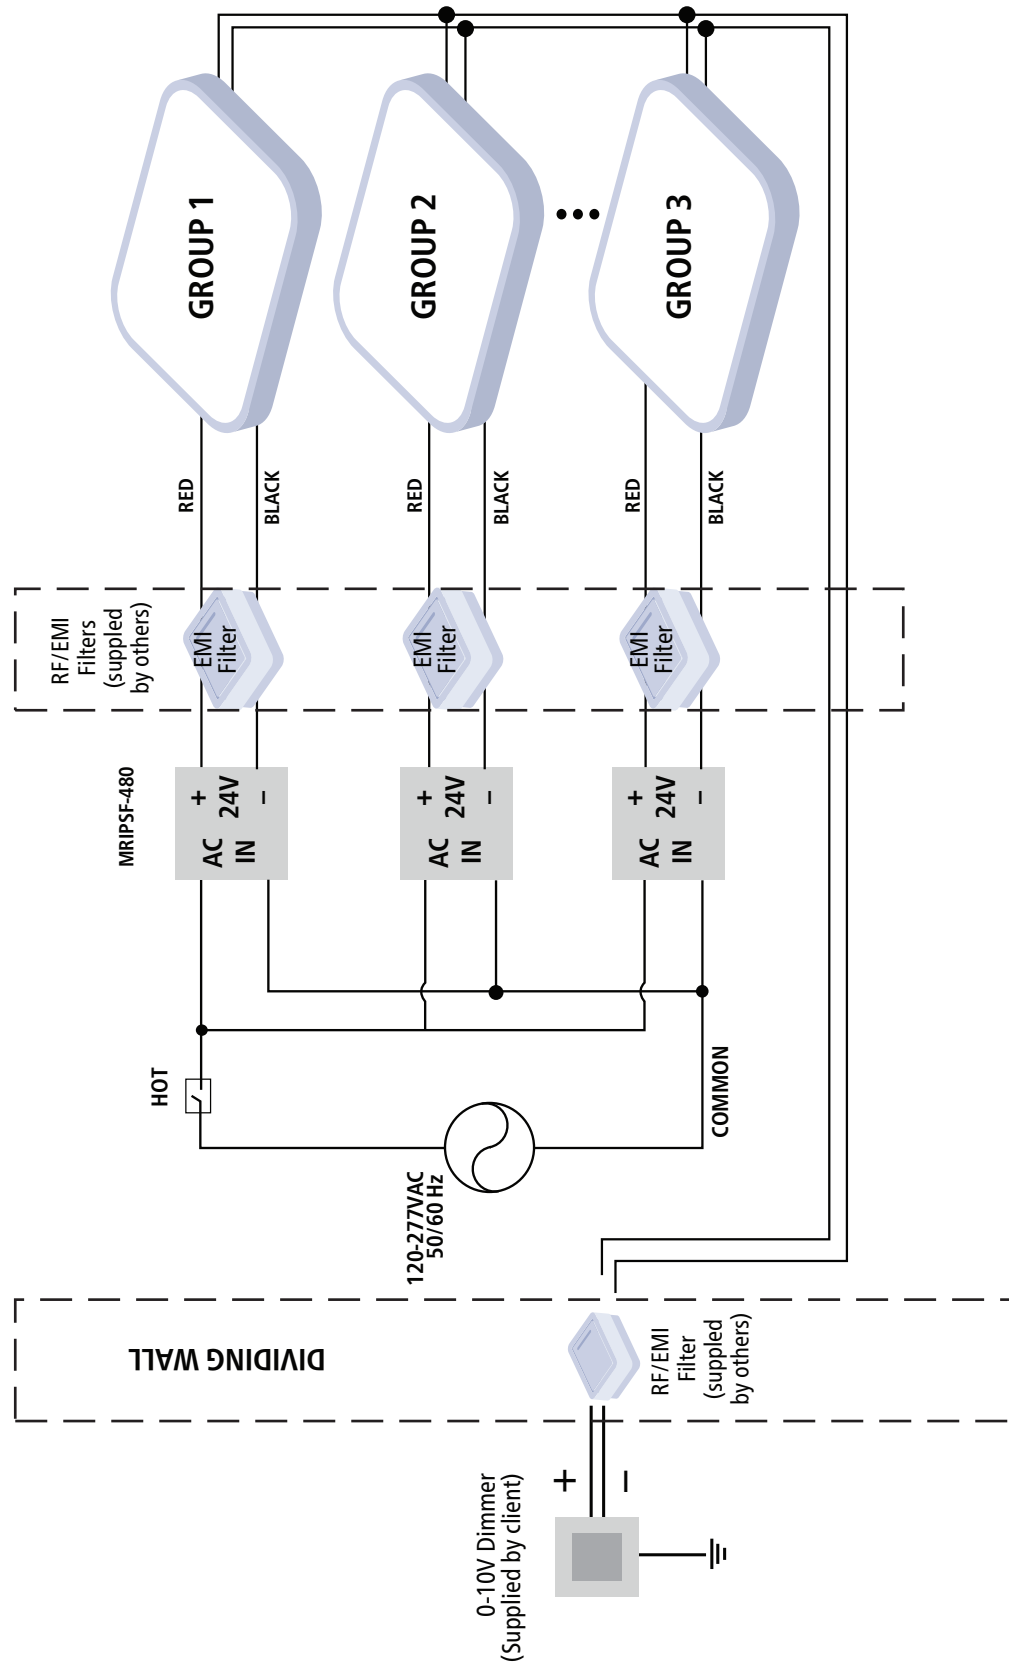

**IMPORTANT: EACH FIXTURE
REQUIRES IT'S OWN DRIVER**

INSIDE MRI ROOM

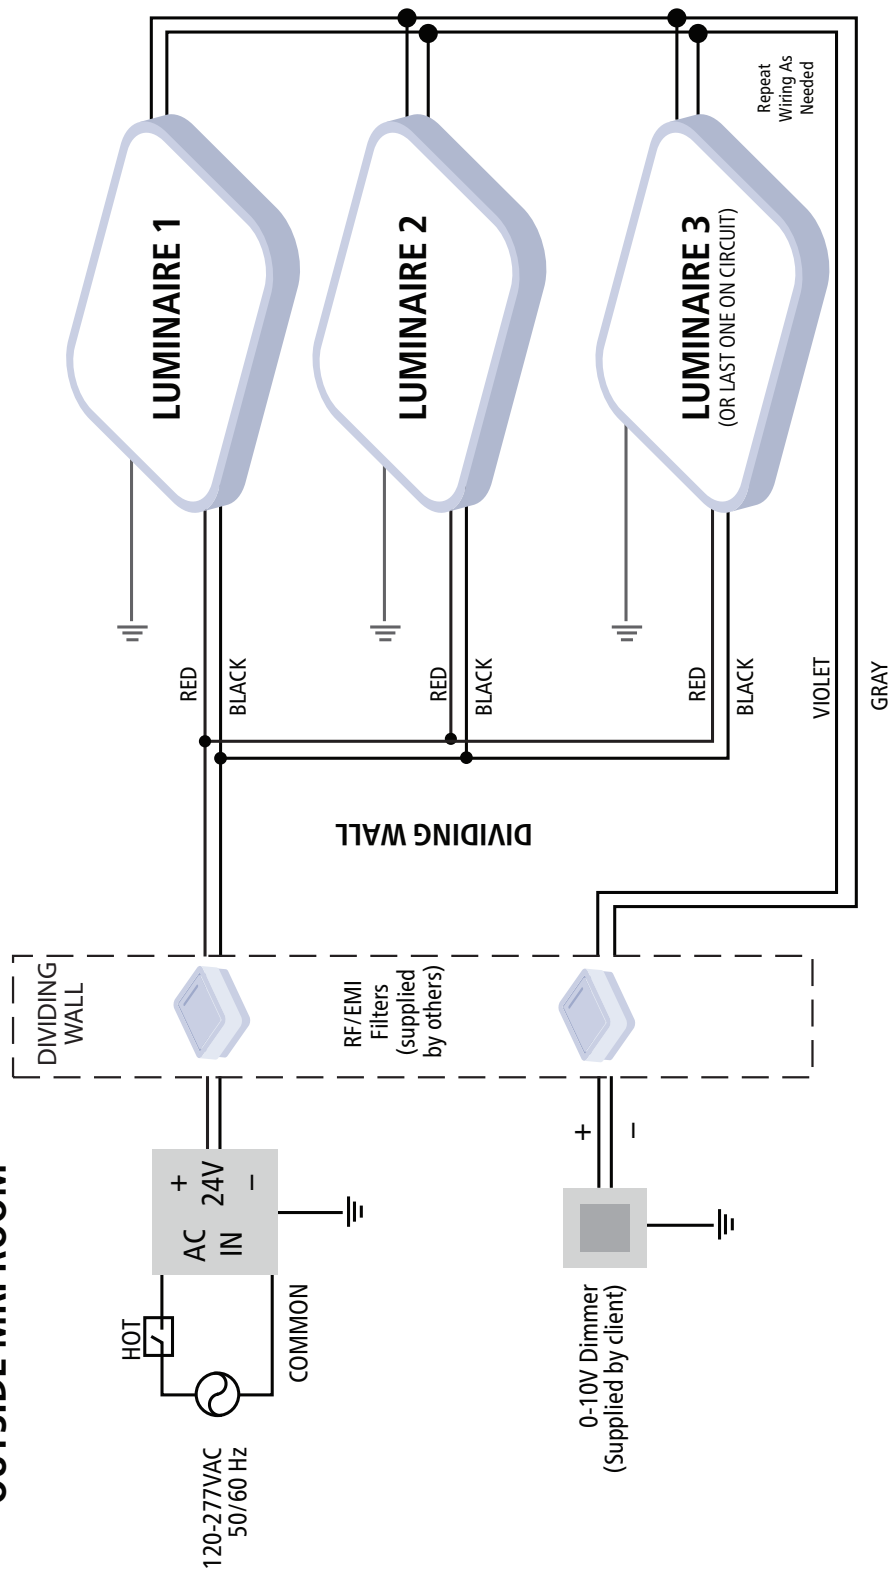

NOTE: ALL WIRES WITHIN MRI ROOM TO BE INSIDE GROUNDED RIDGID ALUMINUM CONDUIT

**IMPORTANT: EACH FIXTURE
REQUIRES IT'S OWN DRIVER**